

QUICK START  
GUIDE

BN68-05448A-02

Attach the TV to  
the Stand

Step 1

Connect video  
devices

Step 2

Insert the  
batteries into the  
remote control


Step 3

Power on and  
start the initial  
setup

Step 4



**Warning: Screens can be damaged  
from direct pressure when handled  
incorrectly. We recommend lifting the  
TV by the edges, as shown.**

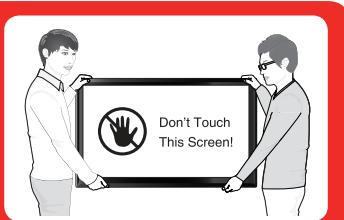

Step 1


Installing the Wall Mount (Optional)



Wall or Ceiling Mounting:


If you mount this product on a wall, it should be mounted only as recommended by the manufacturer. Unless it is correctly mounted, the product may slide or fall, causing serious injury to a child or adult, and serious damage to the product.

1A

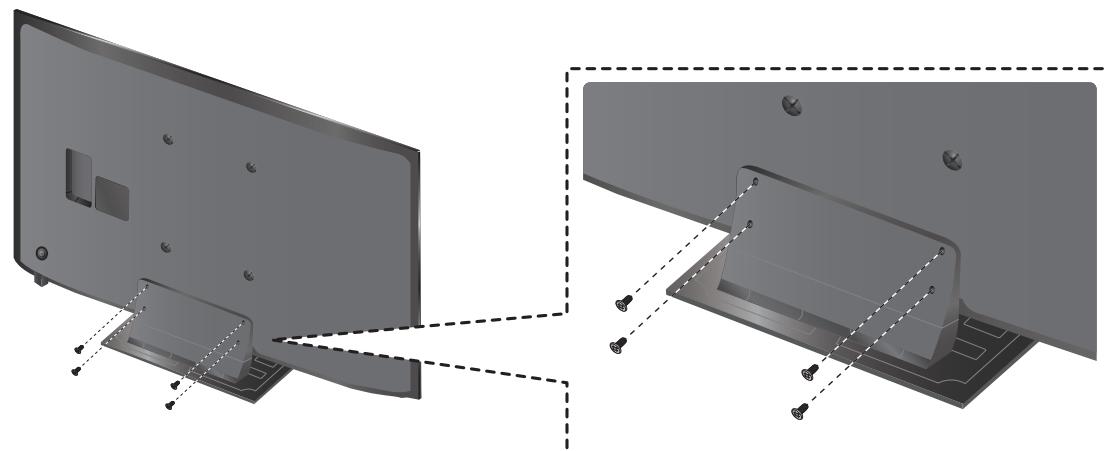


Loosen four screws on the back of the TV.

1B

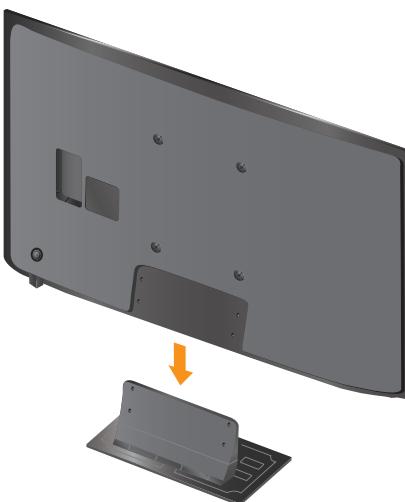

Make sure that at least two people are holding each side of the TV before removing the stand as shown in the illustration.

1C

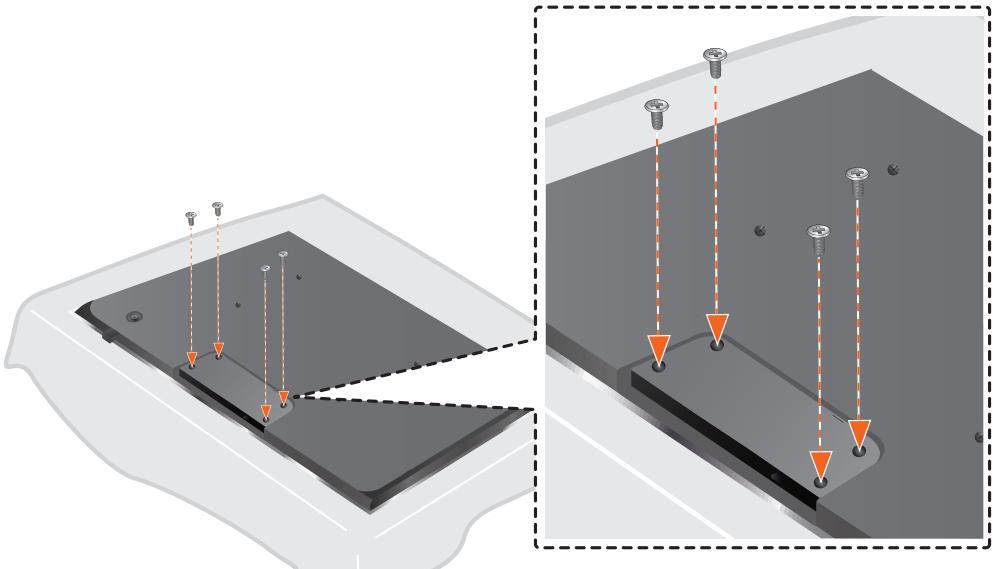

After detaching the stand from the TV, re-insert the screws into the stand to block the screw holes and store the screws.

## Welcome to your new Smart TV!

The following instructions cover assembling, connecting, and setting up your new TV. Make sure you have the accessories listed below.

## Included in this box

## Remote Control



Remote Control

## Stand Parts and Cables



Power Cord



Wall mount adapter



IR extender



Cable manager

Batteries (AAA x 2)



Also included: User Manual




Make sure that the remote control sensor does not touch the bottom when detaching the stand, to mount the TV on a wall.

## Step 2

### Connect video devices


We suggest using HDMI connections whenever possible for the best picture quality.

- >Please check the shape of the plugs to avoid inserting them upside down.
- The appearance of your TV may differ from the images below, depending on the model.

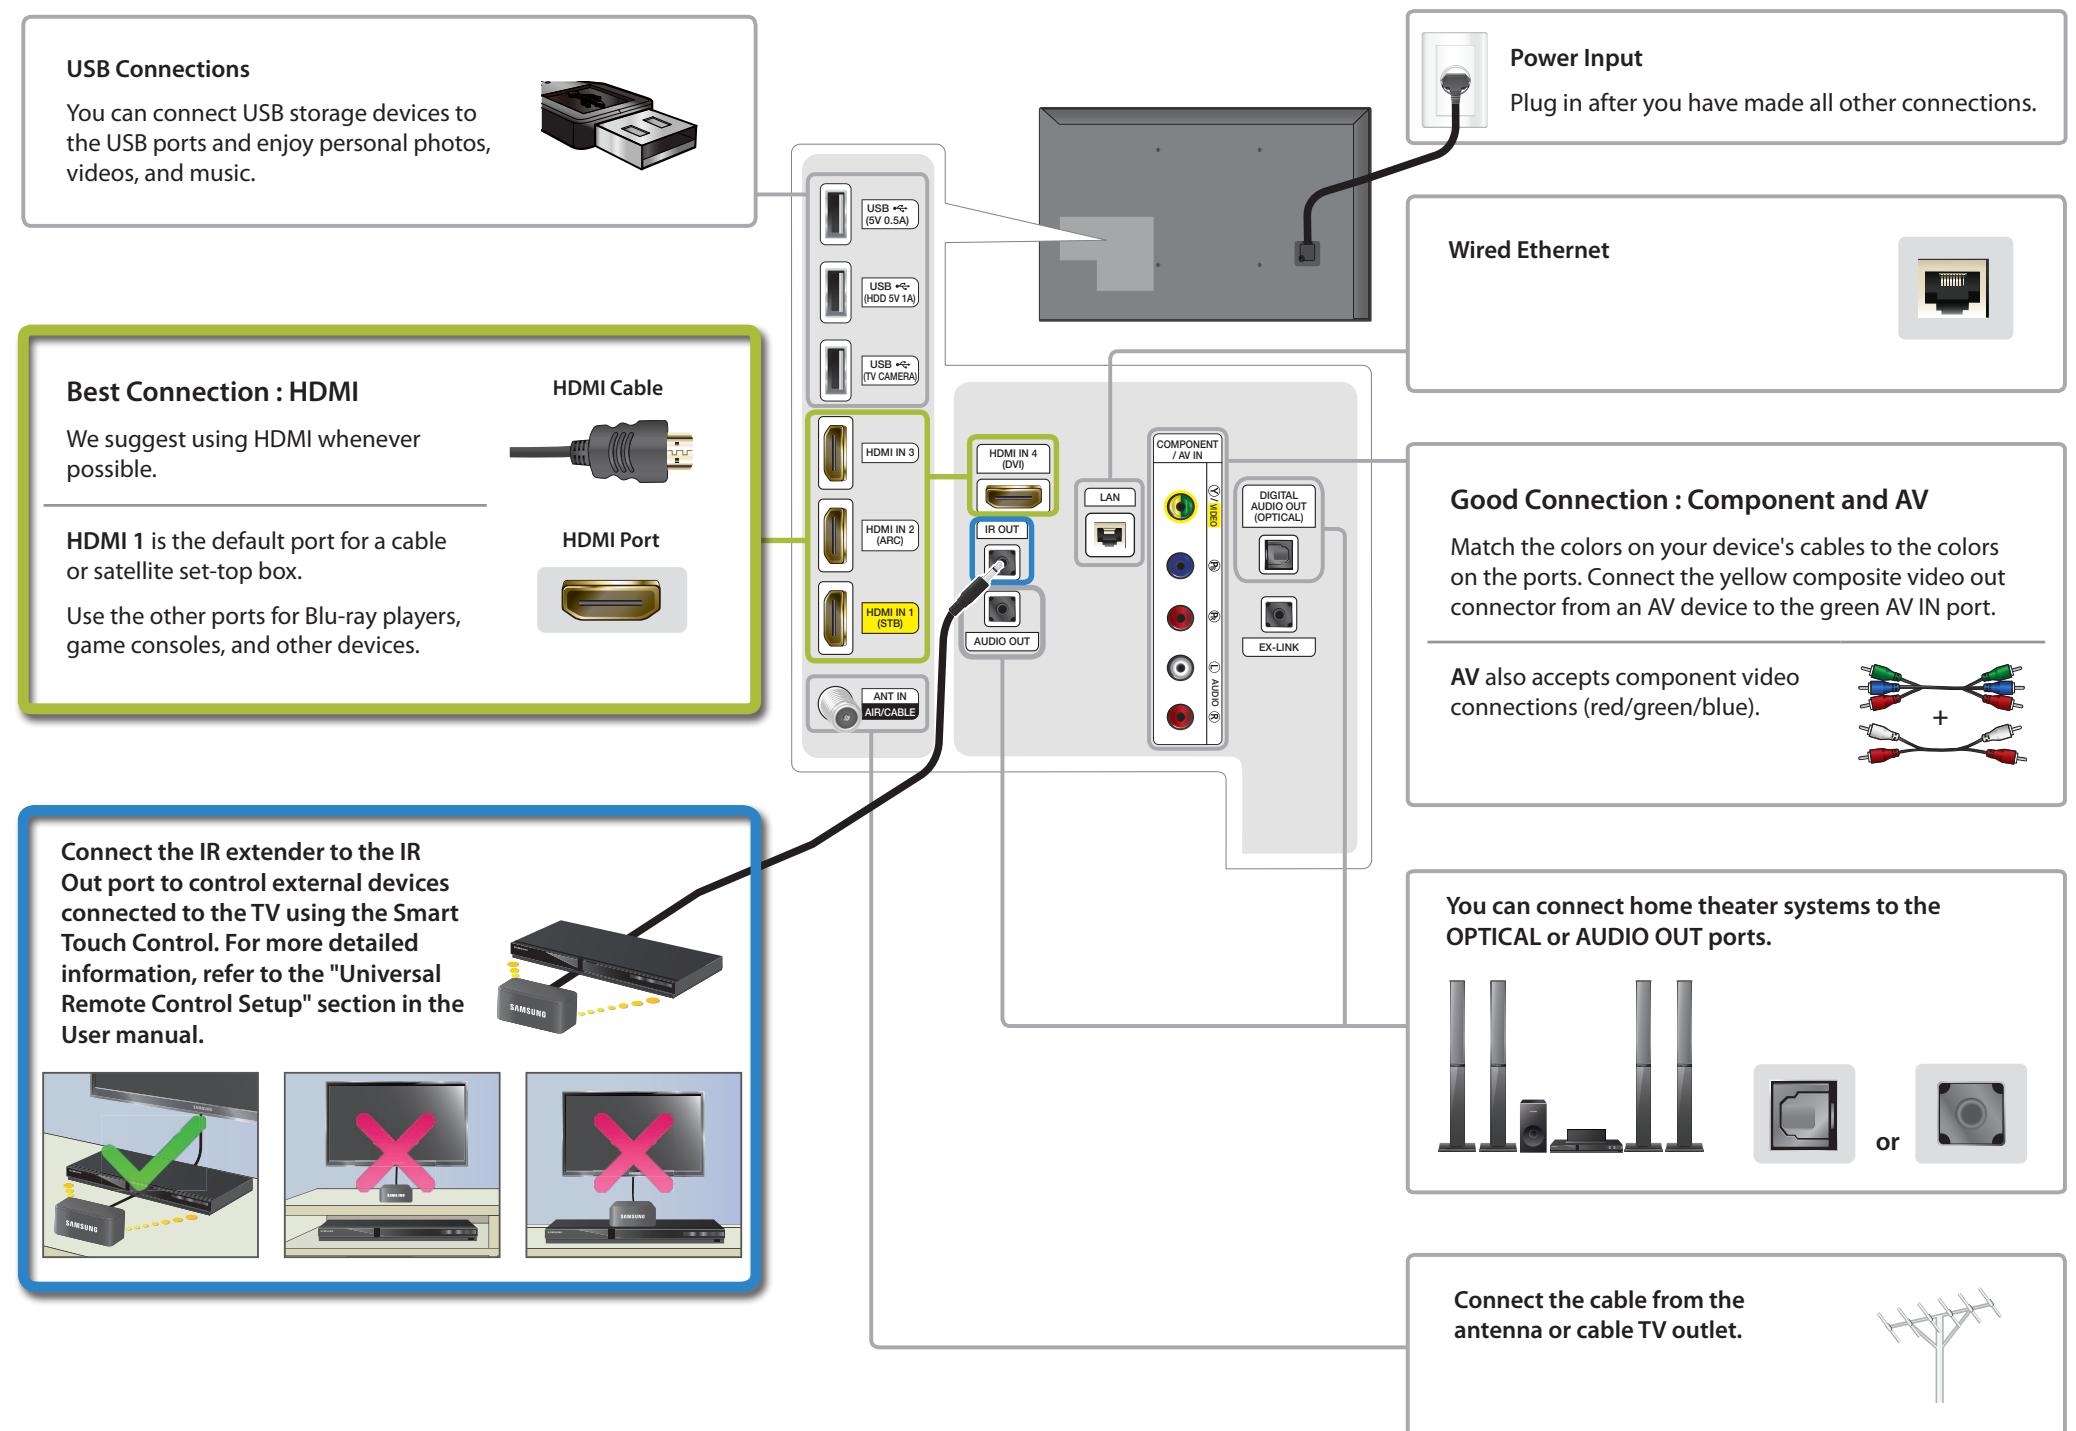

## Step 3

### Using the Smart Touch Control

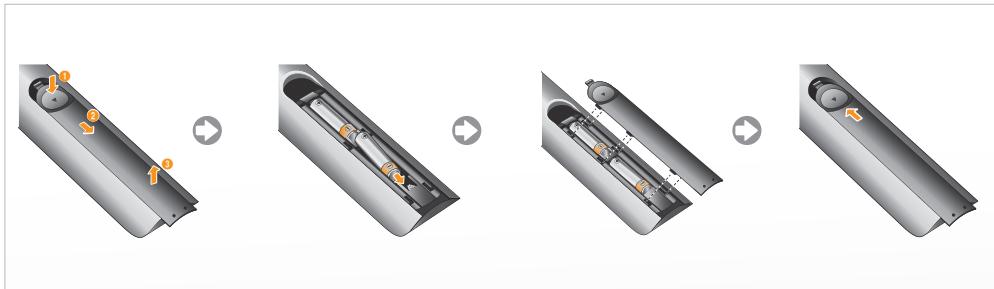

### Troubleshooting

#### The stand is wobbly or crooked

Make sure the arrows on the stand are properly aligned.

#### The TV won't turn on

Make sure all cables are fully inserted, and that the remote has batteries installed.

#### I have extra parts

The TV includes some optional parts to help with wall mounting and cable routing.



If you experience issues, please do not take the TV back to the store.

In the United States of America, call us at 1-800-SAMSUNG (1-800-726-7864) or visit us at [www.samsung.com](http://www.samsung.com) or [www.samsung.com/spsn](http://www.samsung.com/spsn) for support and warranty service.

For other countries, refer to "Contact SAMSUNG WORLDWIDE" in the user guide.

## Step 4

### Power on and start the initial setup

#### Information required:

- Wi-Fi network password (if you use one)
- Zip code
- Cable or satellite provider info

Plug in the TV. Press the power button on the remote to turn on the TV and start the initial set-up.

- The TV must be connected to the Internet to use the Smart Features. If you have a wireless network, confirm that your network router is working before you start the initial setup. If you have a wired network, connect the TV to the network with a CAT 7 cable before you begin.

**Congratulations on your new Smart TV!**